

Hay Feeder Assembly

A – Tray (1) B – Ends (2)
C – Lid – under (1) D – Lid (upper)
E – Hay Grate F – Legs (4) (1) – Bag of bolts

Remove all parts from the tray.

Slide the 4 legs into the leg slots. Tighten the leg bolts at your preferred height.

Hold an End on the tray lining up the pre-drilled holes. Drop a bolt in each hole and hand tighten a bolt on. Do not use a washer.

Repeat the other End.

Hold the Hay Grate open in a “V” shape resting on the bottom of the tray so that the 2 pre-drilled holes on each end at the top line up. Slide a bolt with a washer into the holes first then hand tighten with a nut. The two eyelet bolts go through the pre-drilled holes in the end of each of the Lids (upper-same side). Once you have both of the bolts in each end go back and tighten all the nuts and bolts with a wrench.

Next hold the Lid (under) on top of one side of the Hay Grate. Make sure all of the hinge holes line up. Attach with the “short” bolts and nuts through the pre-drilled holes. Next hold the other Lid (over) on top of the other side and attach with the bolts provided. Install the eyelet bolts to the “Upper Lids” on the end. There are pre-drilled holes on each end so you can choose which end you want to open the feeder from. Attach the latch connector to each of the eyelet bolts. This will hold the lids down in the wind. Finally adjust the legs to the proper height.

Open lid cover and place the hay inside the “V”. Close lid and attach latch connector then let the fun begin!

WARNING! MAKE SURE YOU SECURE THE FEEDER SO IT CANNOT BE KNOCKED OVER FOR ANY REASON!